

CB2 WIRELESS INTERCOM SYSTEM

Stand Alone



Local Headset (A/B, Talk, Volume)





A B TALK •User Interface is 1 Volume, 2 Channels (A or B)

•Volume knob (x1) – Controls volume of both channels

•Same design and battery as current CrewCom packs.

- Talk Button Controls talk state of both channels •Latch or Momentary
- Channel A/B Button toggles between A and B •Can be locked to A or B
- Fixed Function Buttons
 - •F1 = CALL (Enable/Disable in Menu)
 - •F2 = STAGE (Enable/Disable in Menu)
- •RP Settings managed via CB2 display

ICCOUNTER INDUSTRIEL SOLUTIONS

CB2 WIRELESS INTERCOM SYSTEM



•6+6 Drop-in Charger

•Simultaneously charges up to six RPs and six batteries.

Batteries

•PBT-LIP-01 LiPoly Rechargeable



Full Lineup of SmartBoom Headsets
Standard 4-pin XLR



•FleXLR Gender Adaptor •4-Pin Female to 5-Pin Female •5-Pin Female to 5-Pin Female

•External Antennas •Yagi 900MHz Directional Antenna




•Circular Polarized 2.4GHz Directional Antenna

Innovative Industrial Solutions, Inc. 2830 Skyline Drive Russellville, AR 72802





- •Up to six wireless RP-12 Packs
- •Two Conferences (A and B)

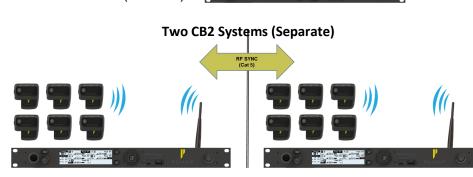

 Two CB2 BaseStations •Sync Port: RF Sync'd

•Two Conferences each (Audio is NOT shared)

•Up to six wireless RP-12 packs per system





- Two CB2 BaseStations
 - •Sync Port: RF Sync'd and Linked Audio
- Two Conferences each (Audio is shared)
- Up to 12 wireless RP-12 packs
- •Packs cannot roam between CB2 BaseStations.

·Locked onto the base they're paired to.

CrewCom to CB2 (Seperate)



Innovative Industrial Solutions, Inc. 2830 Skyline Drive Russellville, AR 72802